




# Installation OF TRIMLESS DOWNLIGHTS

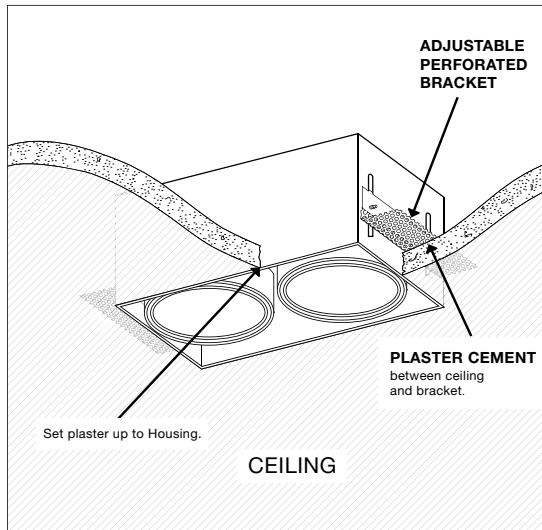

- 1 Cut a hole in the ceiling just large enough to accept the trimless housing.
- 2 Set the bracket height to match the ceiling thickness and make all electrical connection(s) to the transformer(s).
- 4 Apply some wet plaster cement to the top side of the ceiling at each end of the opening.
- 5 Insert the housing through the opening and orientate into position so that the perforated brackets are set in to the cement.
- 6 After the cement has dried, adjust the housing height (if required), so that the bottom edge of the housing is flush with the underside of the ceiling.
- 7 Apply plaster cement on to the ceiling face to fill the gap between opening and the housing; cleaning off any excess.

**GAMMA ILLUMINATION**  
PTY LTD

Head Office, 20 Queen Street Revesby NSW 2212, Australia  
NSW (02) 9772 3111 / VIC (03) 9874 0811 / QLD (07) 3266 8900 / SA (08) 8232 0388 / WA (08) 9377 1322  
info@gammaillumination.com / www.gammaillumination.com